



## **WIRELESS SPEAKERS**

With dock for iPod and Aux Input for MP3 Players

### **User Guide**



Congratulations on the purchase of your new Wireless iPod / MP3 Speaker system. As well as your 3 year parts and labour warranty you have the added peace of mind of dedicated help lines and web support.

### **AFTER SALES SUPPORT**

UK / N.IRELAND HELPLINE NO 01270 508538

REP. IRELAND HELPLINE NO 1800 995 036

WEB SUPPORT [www.quesh.co.uk](http://www.quesh.co.uk)

MODEL NUMBER: 44216

## **Contents**

**1**

 
---

### **Chapter**

- 02. General Information and Safety Instructions
- 03. Battery Handling and Usage
- 04. Accessories
- 04. Features
- 05. Getting Started
- 06. Remote Control Operation
- 07. Connecting iPod / MP3 Player
- 08. Technical Specifications
- 09. Warranty Card
- 10. Fault Report Card

## General Information & Safety Instructions 2

Please read through the following safety information before first use.

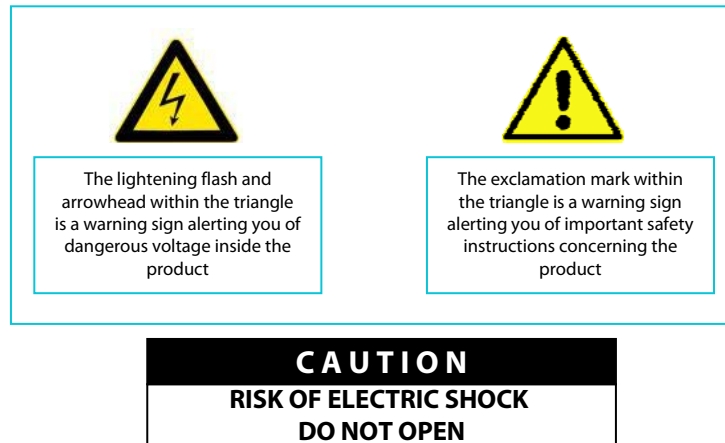

- To avoid risk of electric shock do not attempt to open this appliance.
- Keep away from fire.
- Do not expose this product to water, rain or dampness.
- Keep this appliance away from direct sunlight and other heat sources.
- Keep this appliance away from strong magnets.
- Avoid placing heavy objects on top of the appliance.
- Always disconnect the appliance from mains power before cleaning.
- Clean the exterior of the appliance with a soft cloth only.

## Battery Handling and Usage

3

**DO NOT ATTEMPT TO REPLACE THE BATTERY INSIDE THIS UNIT**

The Lithium battery inside each speaker cannot be replaced.

### Remote Control

The remote control uses 1 x CR25 type battery (included).

### Battery Safety

- Never throw batteries into fire or expose to excessive heat sources.
- If batteries are swallowed, please seek immediate medical attention.
- Ensure correct +/- polarity when installing batteries
- Do not recharge non-rechargeable batteries

### Disposal of Your Old Product

Electric and electronic equipment (EEE) contains materials, parts and substances which can be dangerous to the environment and harmful to human health. Once this appliance has reached the end of its life span, the unit in its entirety should be taken to a recycling centre. Please contact your local authority for details of recycling schemes in your area.



Do not dispose of batteries in your household waste.  
Please contact your local authority for details on safe disposal.



Do not dispose of this product in your household waste.  
Please contact your local authority for details of recycling schemes in your area.

Helpline No. UK/Northern Ireland 01270 508538 Rep.Ireland 1800 995 036  
Web Support [www.quesh.co.uk](http://www.quesh.co.uk)  
Model No: 44216

4

## Accessories

4

 
- Remote control
- Mains power adaptor
- 3.5mm Audio line-in cable

## Features

- Wireless iPod / MP3 speakers
- Charges iPod when docked
- Satellite speakers with built in rechargeable lithium batteries
- Up to 3 hours playback
- Operating range 30 metres
- Power output 2 x 6W RMS
- Power and volume control in base station and each speaker
- Auxiliary Input for MP3 player connection
- Remote control operation


## Getting Started

5

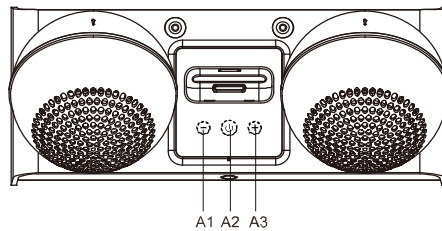


### Top View

 - A1. Volume Up
- A2. Power ON/OFF
- A3. Volume Down

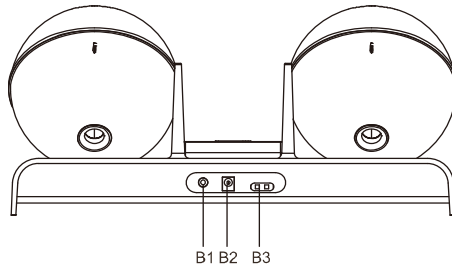

### Rear View

 - B1. Aux Input
- B2. Mains power socket
- B3. Frequency channel switch

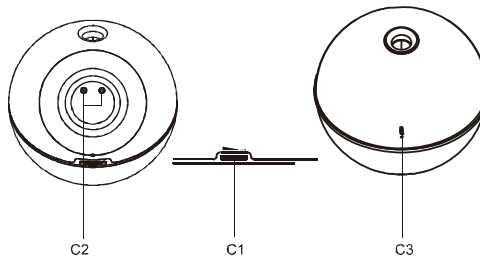


### Speakers

- C1. Power ON/OFF & Volume UP/DOWN
- C2. Charging pin
- C3. LED charging Indicator

## Getting Started


### Setting up your wireless speakers

 Connect the mains power adaptor to your household mains power outlet socket and the other end into the mains power input (B2 pictured on the previous page) at the rear of the base station. Switch on the mains power supply and then press the standby button (A2 pictured below) located on the top of the base station.

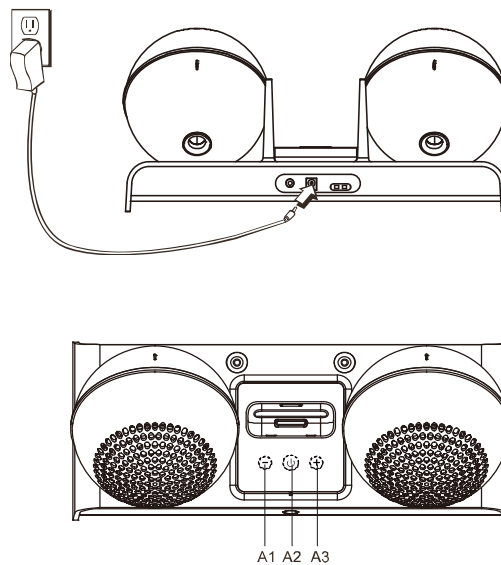

## Setting up your wireless speakers

 
Once you have connected the base station to a power source, position the two speaker capsules on the base station ensuring they are firmly in place. A red LED light will appear on each speaker to indicate automatic charging. We recommend charging the speakers for 4 hours before first use. The LED light will change to green when the speakers are fully charged. Once the speakers are fully charged you can remove them from the base station. To switch the speakers on, simply turn the volume wheel to the right until it clicks. A blue LED light will be displayed on the volume indicator. The wireless function will be activated automatically as soon as the speakers are removed from the base station. The wireless operating range is up to 30 metres in an open area without interference.

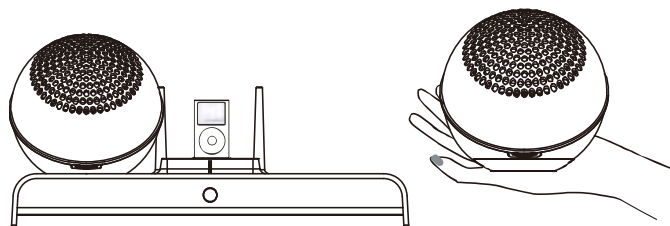



## Remote Control

 6

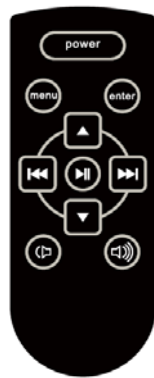

### Remote control

Power: Standby ON/OFF.

Menu: Returns to main menu.

Enter: Selects the command.



Menu UP



Menu DOWN



Previous track



Next track



Play / pause



Volume Increase



Volume decrease

## Connecting iPod

7

The following diagrams shows the iPod's which are compatible with this product.



iPod 1<sup>st</sup> & 2<sup>nd</sup>  
Generation



iPod touch



iPod classic



iPod nano  
1<sup>st</sup> & 2<sup>nd</sup>  
Generation



iPod nano 3<sup>rd</sup>  
Generation



iPod 3<sup>rd</sup> 4<sup>th</sup> 5<sup>th</sup>  
Generation

 


iPod shuffle  
1<sup>st</sup> Generation



iPod shuffle  
2<sup>nd</sup> Generation

Place your iPod carefully into the docking station

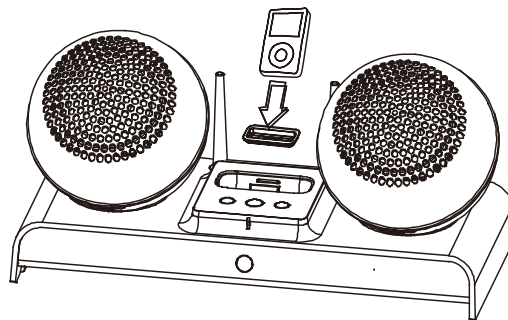


Helpline No. UK/Northern Ireland 01270 508538 Rep.Ireland 1800 995 036  
Web Support [www.quesh.co.uk](http://www.quesh.co.uk)  
Model No: 44216

IO

## Playing iPod

 Press the power button on the base station to turn the unit on. Switch on each speaker, then switch on your iPod in the usual manual and select a music track or album to play. Now choose the best channel using the frequency channel switch located at the rear of the unit.

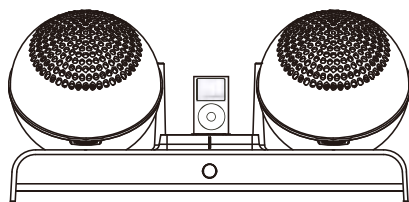

**Note:** If you experience any sound interference, try selecting another channel. There are 3 channels to choose from for the best reception.

Occasionally the speakers give off a little noise after the power is turned on. This is perfectly normal as the unit is searching for the wireless connection. The noise will stop after connection is paired.

You can use the Vol + or Vol – to adjust the sound level.


The speakers can be taken off the base station and moved freely around your home up to a range of 30 metres.

**Note:** To preserve battery power, the unit switches to standby automatically when not in use. It will function within 10 seconds when the power is switched back on.

## Playing Auxiliary Audio Sources

 Connect one end of the 3.5mm audio line-in cable (supplied) to the headphone socket or audio output port of any auxiliary device i.e. MP3 player, CD player, Mobile phone etc and connect the other end of the cable to the Aux Input located at the rear of the base station.

**Note:** Aux function will not work when iPod is connected.

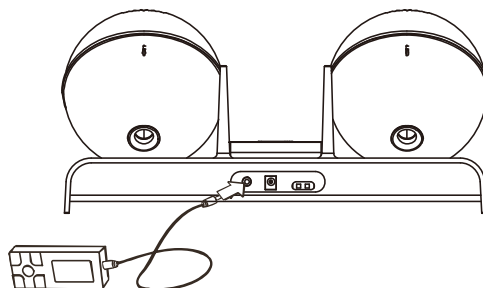

## Technical Specifications

8

Lithium batteries	Playback approx 3 hours on full charge at maximum volume and up to 4 hours at medium volume.
Charge time	4 hours for first use. 3 hours for subsequent use.
Power supply source	AC 100-240V / 50Hz-60Hz
Driver unit	2 x 2.75"
Wireless working distance	Up to 30 metres (100 feet), in an open area without interference.
Power output	2 x 6W RMS
Frequency response	200Hz-20kHz
Impedance	4 ohms
Auxiliary Input	3.5mm Jack



## WARRANTY CARD

**Congratulations!** You have made an excellent choice with the purchase of this quality product. Our commitment to quality also includes our service. Should you, contrary to expectations, experience issues due to manufacturing faults during private use within 36 months of the date of purchase we shall be liable for warranty in accordance with statutory warranty regulations provided that: -

- the device was not put to any use other than the intended
- was not overloaded
- was not used with the wrong accessories
- repairs were carried out only by the customer service centre

The warranty certificate is only valid in connection with the receipt. Please keep both in a safe place. This does not affect your statutory rights.

The purchase is guaranteed for a period of three years beginning on the day of purchase. Keep your purchase receipt safe as proof of date of purchase. The guarantee can only be extended for the duration of any repair required.

Should your item become defective during the warranty period, in the first instance, please call our customer service centre, they will then inform you of what to do next. We will at our discretion, either repair or exchange the device in accordance with warranty legislation.

Please enclose the following when sending your product in for repair: -

- 1.Receipt (proof of purchase)
- 2.This warranty certificate and fault report card complete with your contact details and fault description.

If the original receipt is not enclosed the repair will be charged in all cases. After the warranty has expired you can still send defective devices for repairs to the address stated below. Quotes as well as repairs after the warranty period are to be paid in all cases.

Ensure that the product is well packed as no responsibility can be accepted for items lost or damaged in transit. This warranty does not affect your statutory rights.





## FAULT REPORT CARD

Name \_\_\_\_\_

Address \_\_\_\_\_

Email \_\_\_\_\_

Contact Tel No. \_\_\_\_\_

**Model Number 44216**

Fault Description \_\_\_\_\_

\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

### SERVICE HELPLINE

Qesh Ltd  
1 Solway Court, Crewe Business Park, Crewe, CW1 6LD

UK/N.Ireland 01270 508538

Rep.Ireland 1800 995 036

web: [www.qesh.co.uk](http://www.qesh.co.uk)